




WOOD and METAL STEP INSTRUCTIONS

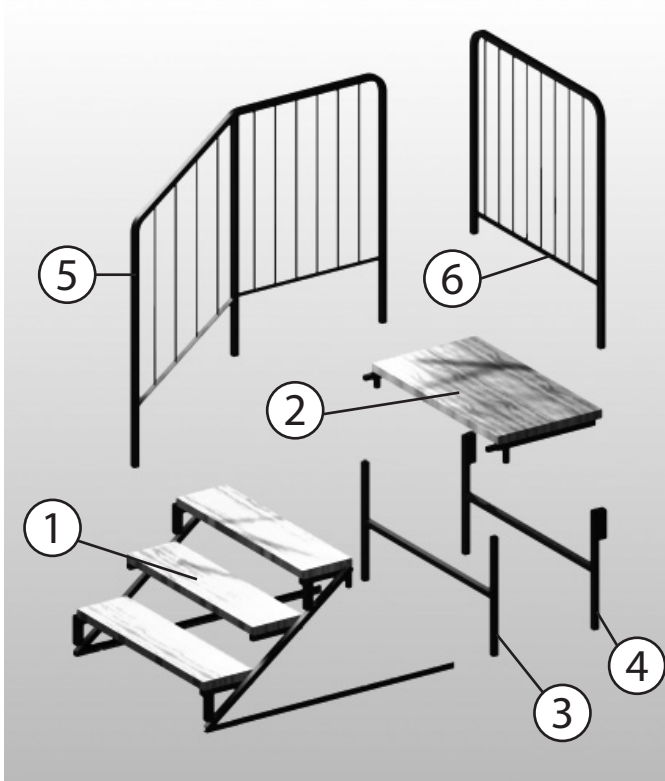

#	DESCRIPTION	QTY
1	Treads	1
2	Platform	1
3	"H" Frame (A)	1
4	"H" Frame (B)	1
5	Side Rail	1
6	Back Rail	1

Diagram of items 5 and 6 are shown as Boca. (Standard also available)

1



Lift up step, leaving the 2 metal runners on the ground.

2




Insert "H" frame (A) into sleeves and rest "H" frame (A) on metal runners (If no platform, skip 3 and 4).




3 Slide the step platform into the sleeve on the step.




4 Insert "H" frame (B) into the back of the platform and rest "H" frame (B) on metal runner. (Handrail bracket to face out)

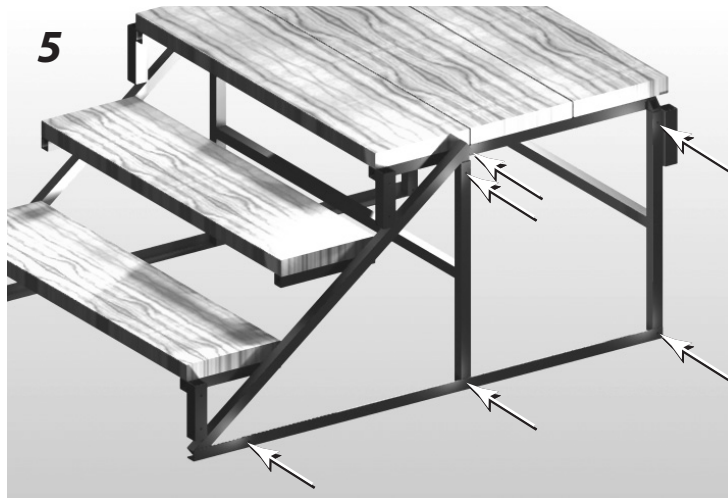

5 Secure both sides of the steps together using tech screws (1/4 - #14 x 3/4) in the pre-drilled hole locations shown.

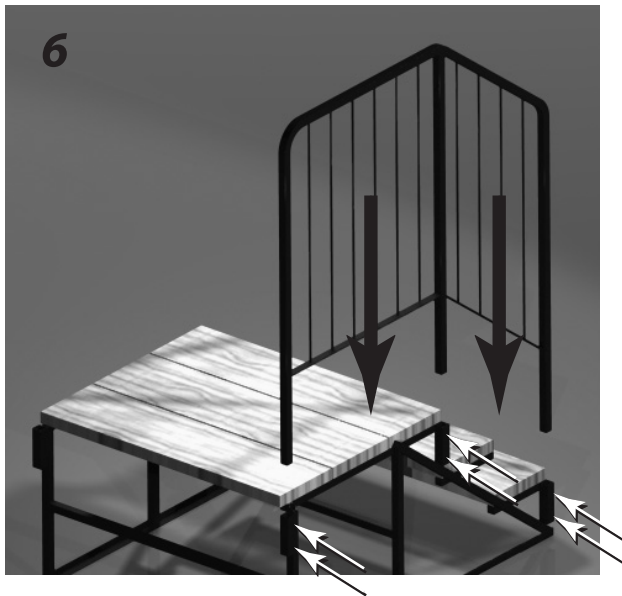

6 Slide the side handrail into the sleeves and secure with tech screws in the pre-drilled holes at the base of each rail.

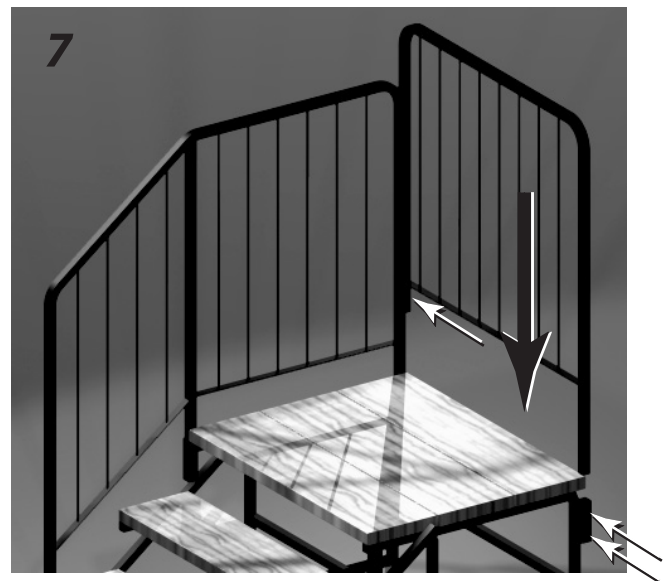

7 Slide back handrail into slots on "H" frame (B). Secure both sides of the handrail using tech screws in the pre-drilled hole locations shown.